


## NOT JUST FOR T-SHIRTS!

Apply on jackets, pillows, bags, paper and so on.

Check your garment/ fabric label for specifics regarding ironing.

For best results, please use the following instructions to apply your heat transfer.

### INSTRUCTIONS:

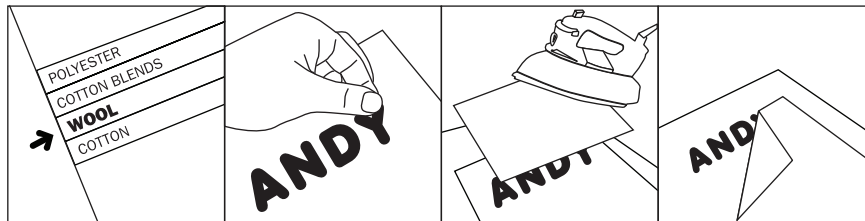

1. Set your iron on the **WOOL** setting (about 325°F - 350°F). Do not use steam. Using an ironing board is best, but any hard, smooth surface will do.
2. The transfer comes to you reversed on the transfer sheet. If your transfer is in one single connected piece, you have the option of peeling off the transfer from the paper and positioning the transfer (fuzzy side side up) onto the fabric area. Otherwise, leave intact and position the transfer (paper side up) onto the fabric area.
3. Place the enclosed press sheet on top of the transfer and press with iron for 15-20 seconds. Move iron around slowly to transfer heat and avoid scorching.
4. Let the transfer cool for a few seconds and lift off parchment sheet and slowly peel away transfer. Place the parchment sheet back on the transfer and give it another press with your iron. If there is any flock residue around the image, it can easily be removed with some tape or a small brush.

### MACHINE WASHABLE.

Let fabric rest for at least 24 hours before first washing.

Machine wash warm or cold gentle cycle. If possible turn fabric inside out.

Do not use Bleach or Dry-Clean.

And definitely do not iron over graphic once placed onto fabric area.



Colour not what you expected?

You are looking at the reverse of the iron transfer, which may be lighter or darker than the actual colour. You can gently peel up a corner and peek at the other side to make sure that it is indeed the right shade, promise!